

FIG. 1

VEHICLE CONTROL INTERFACES 112

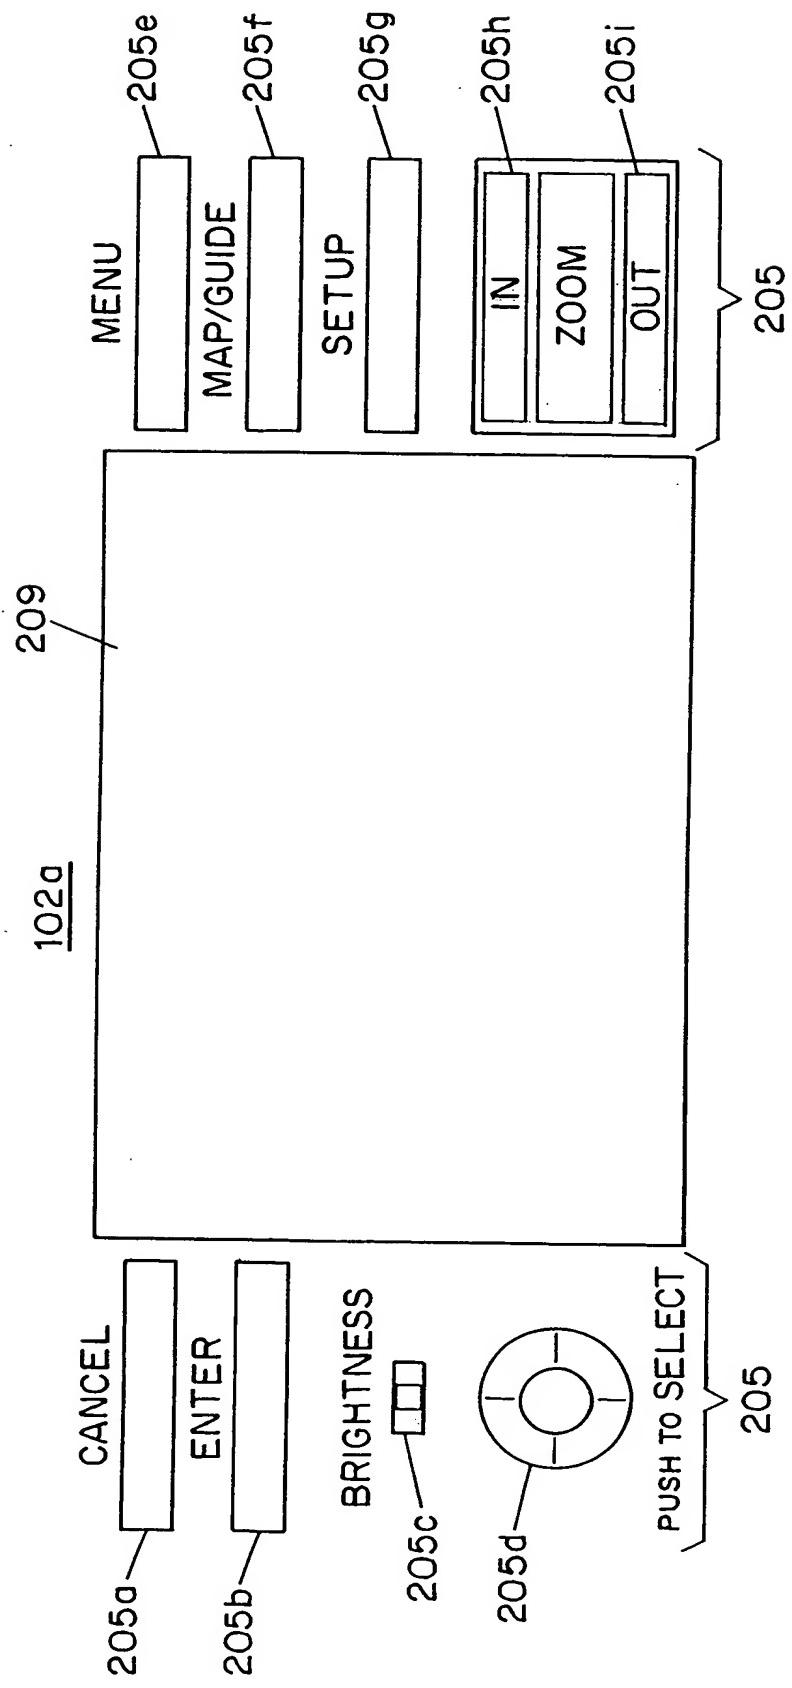


FIG. 2

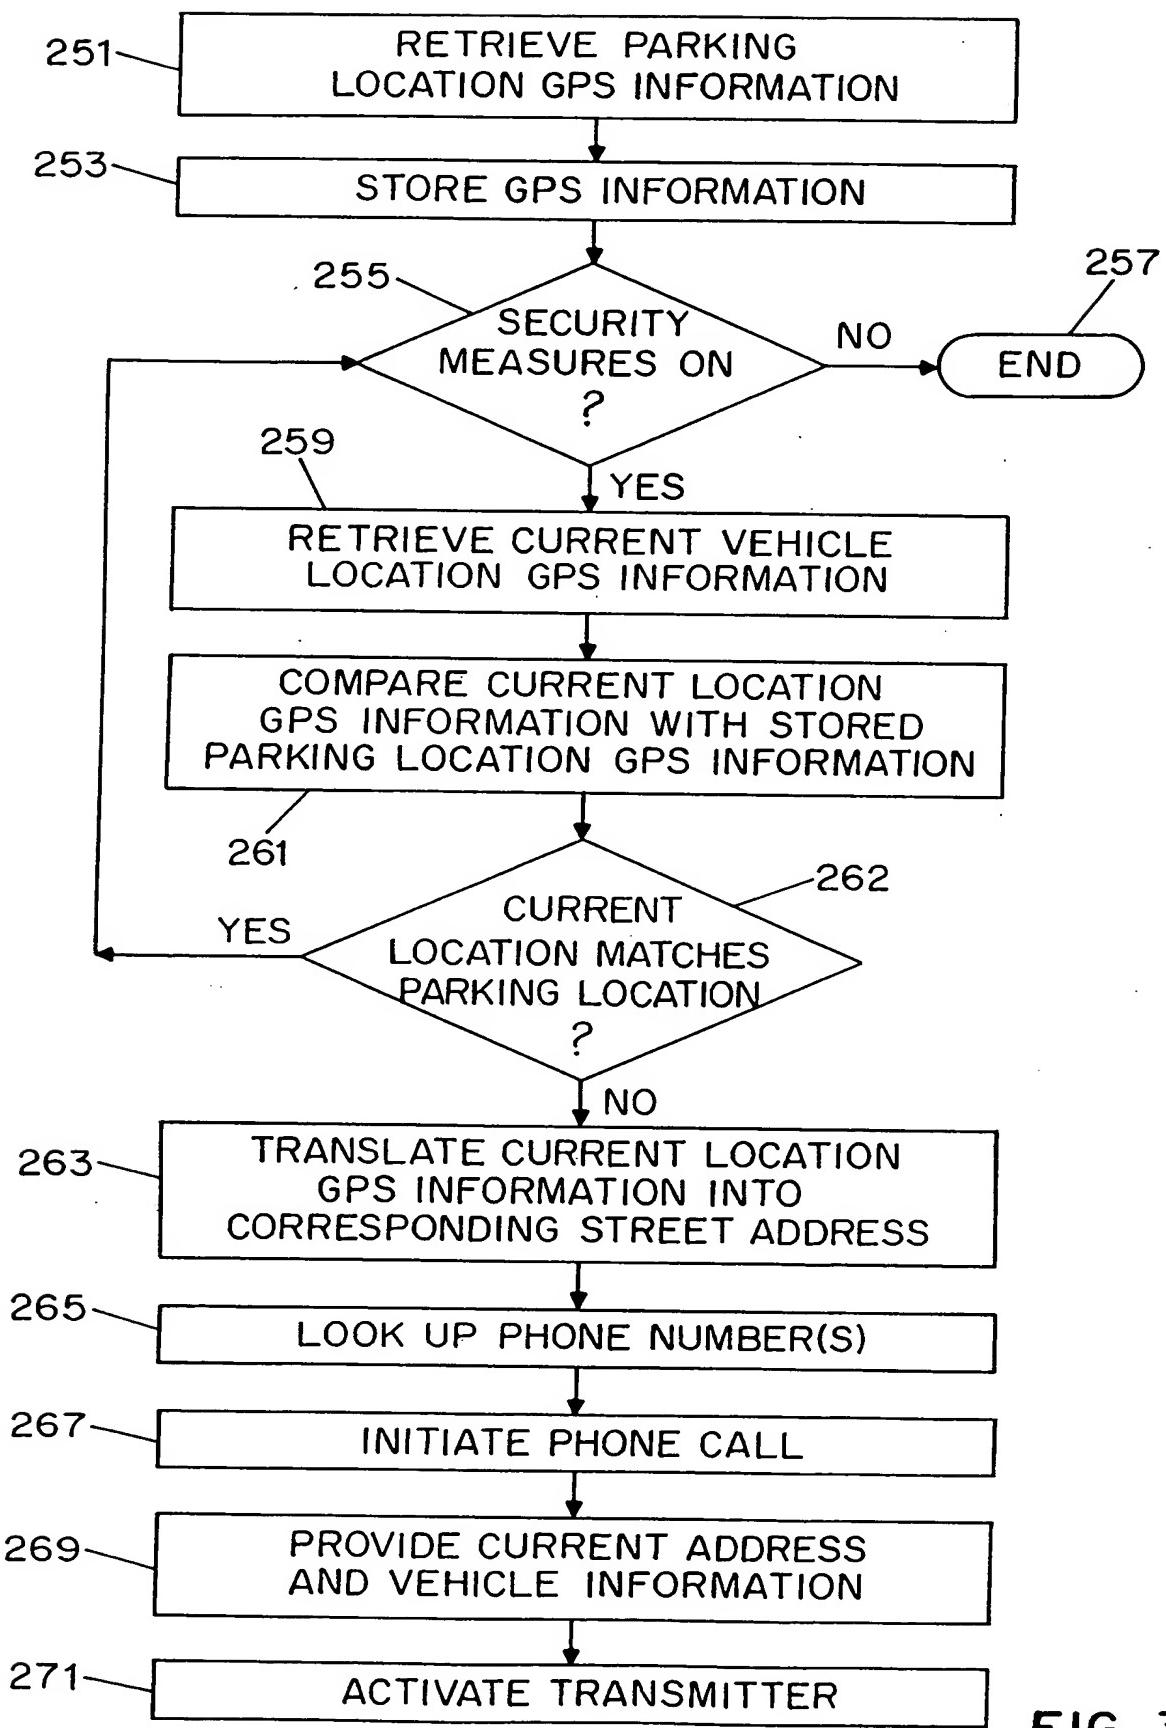


FIG. 3A

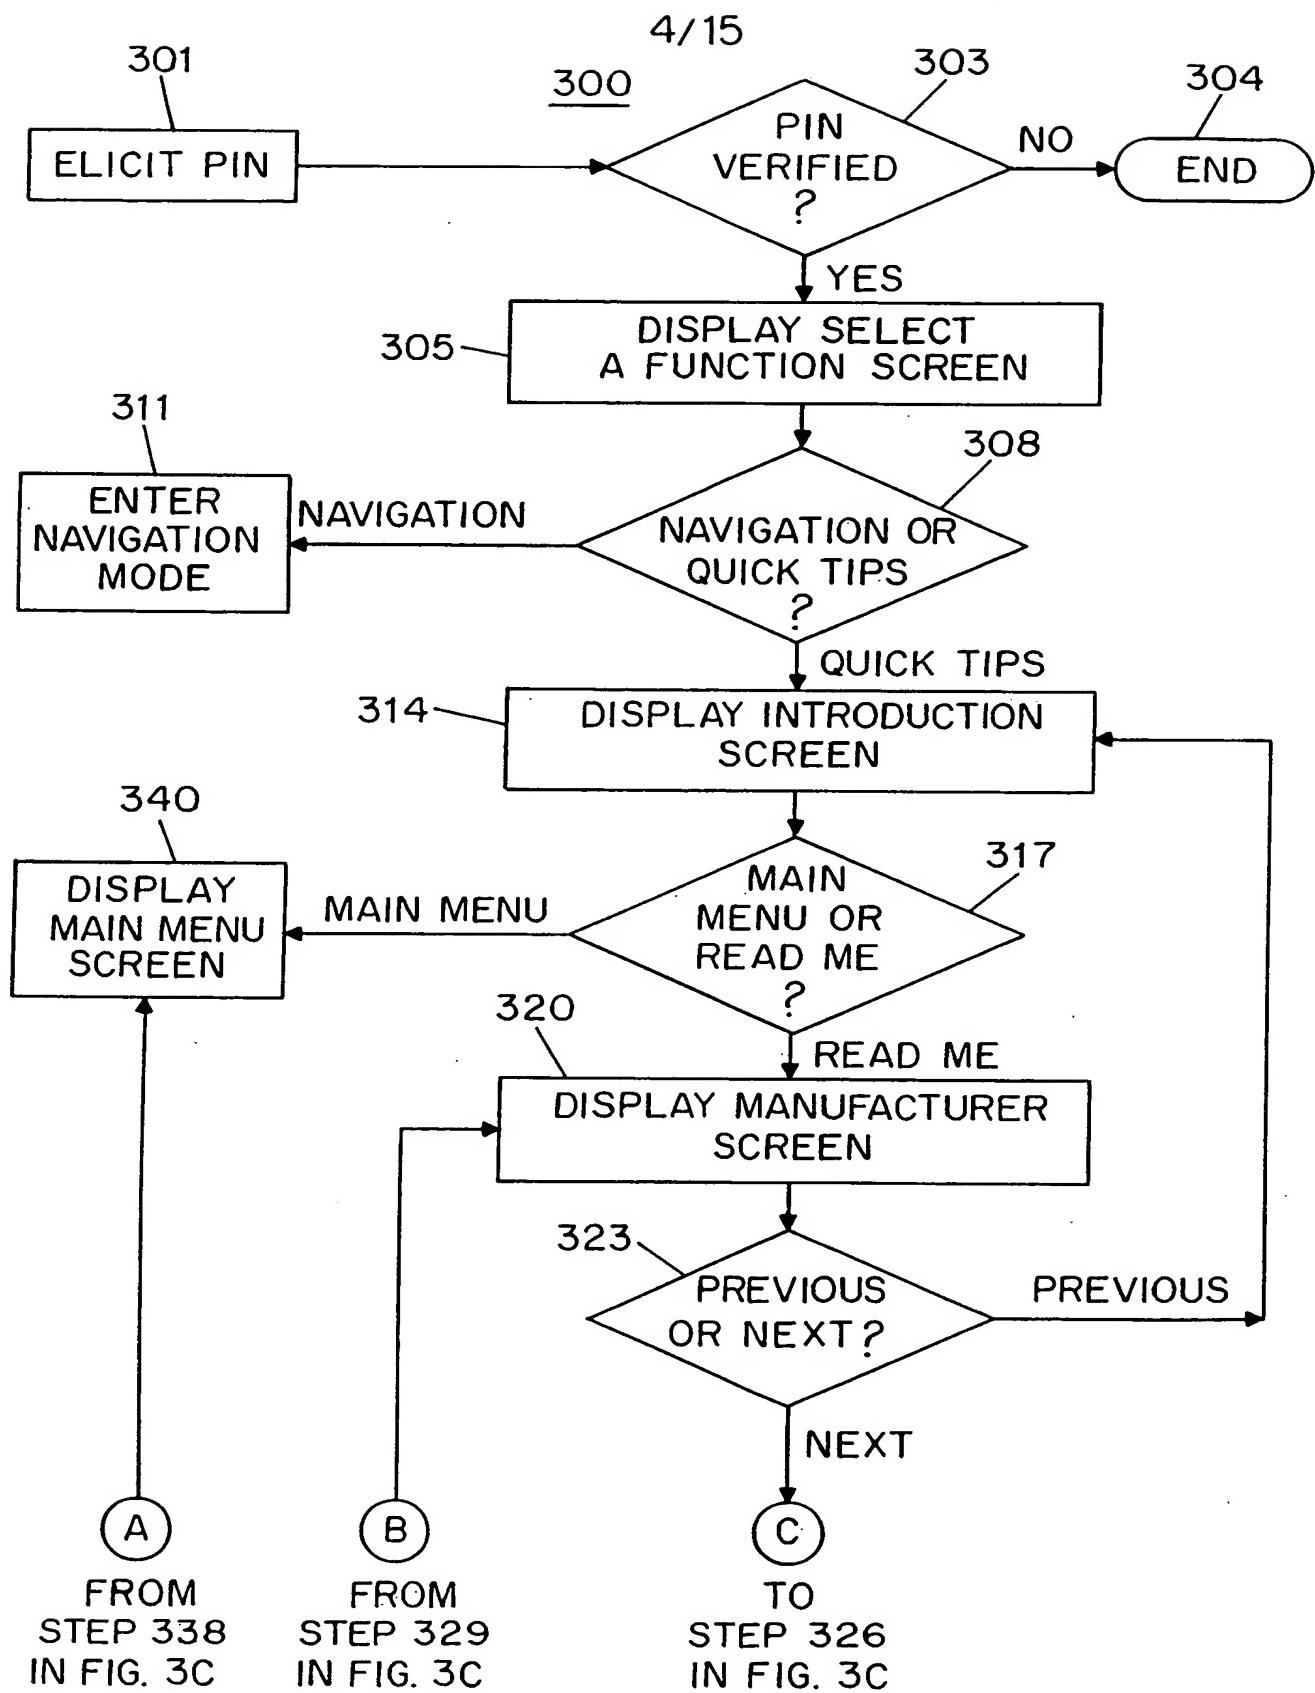


FIG. 3B

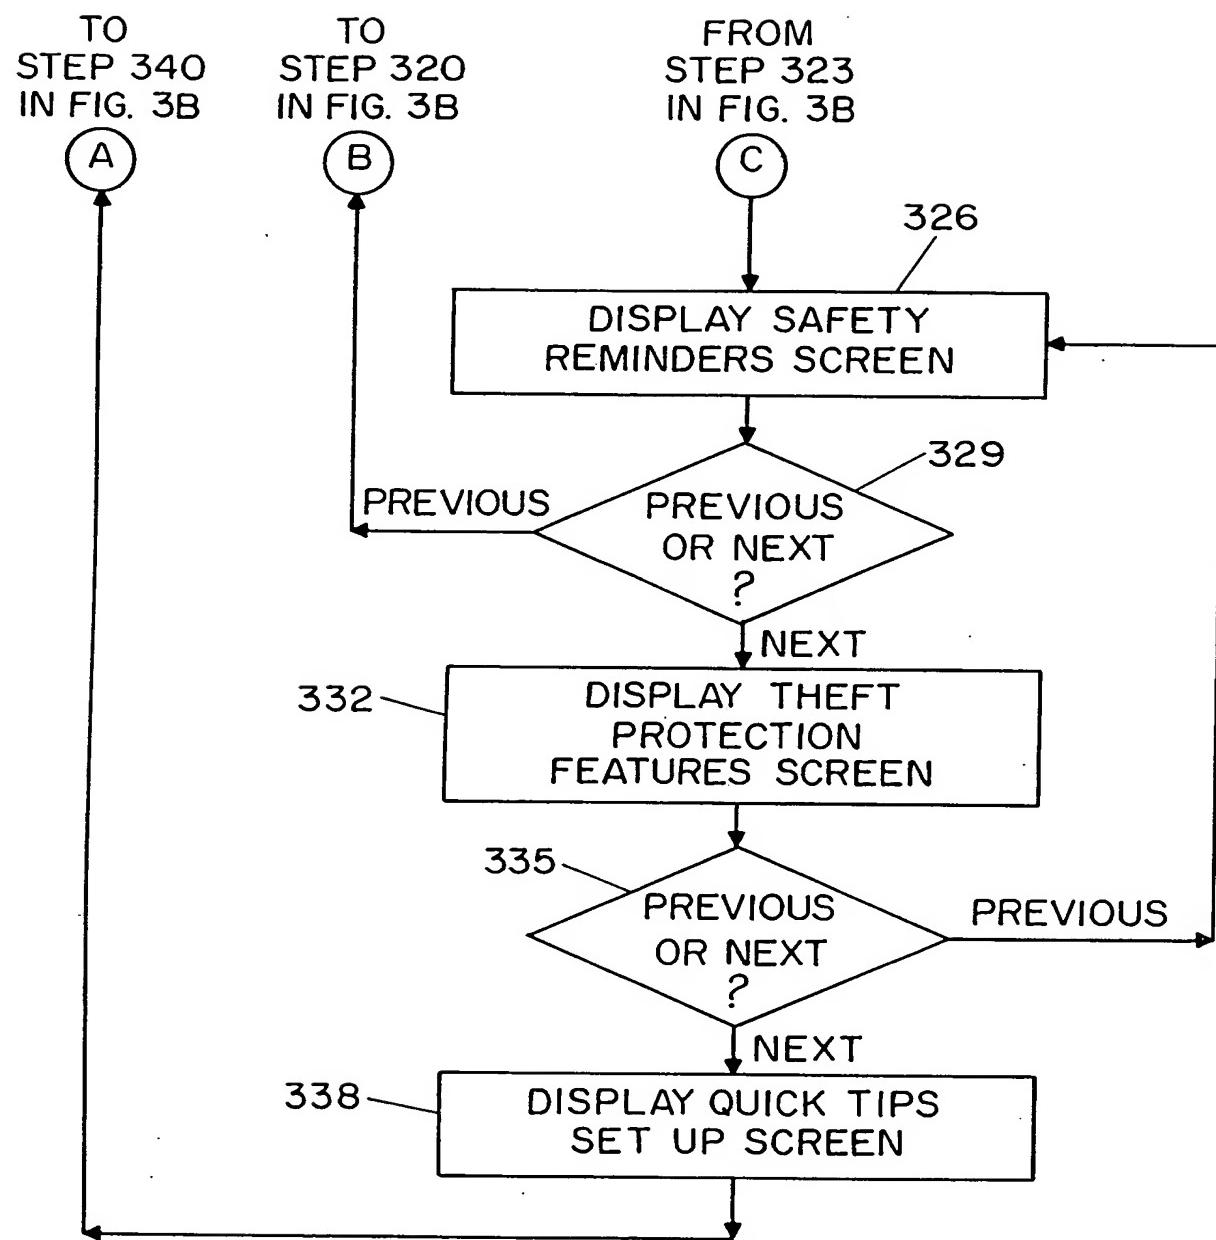


FIG. 3C

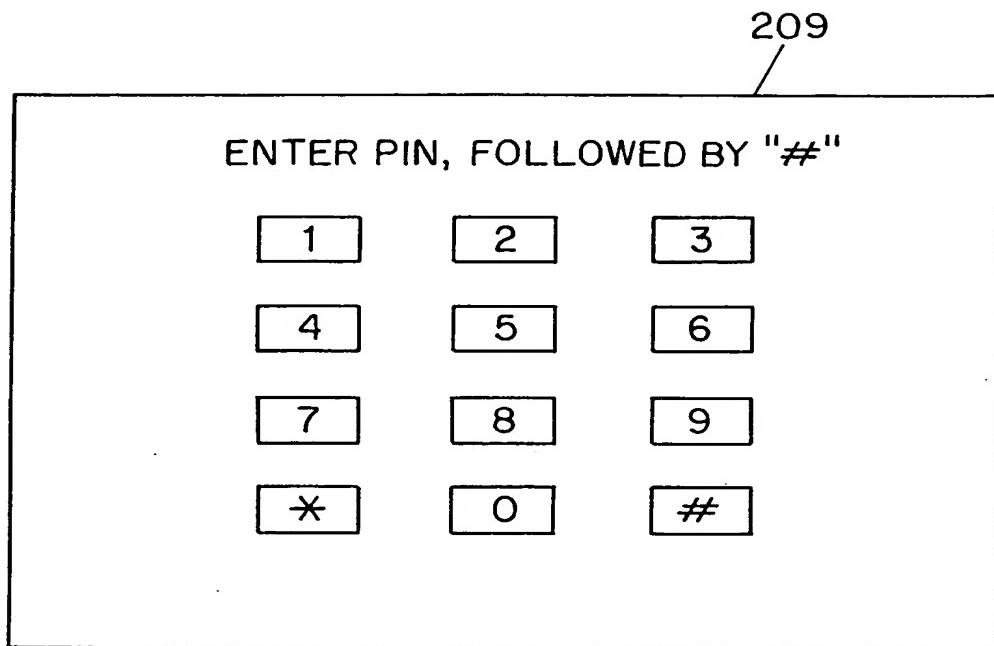


FIG. 4A

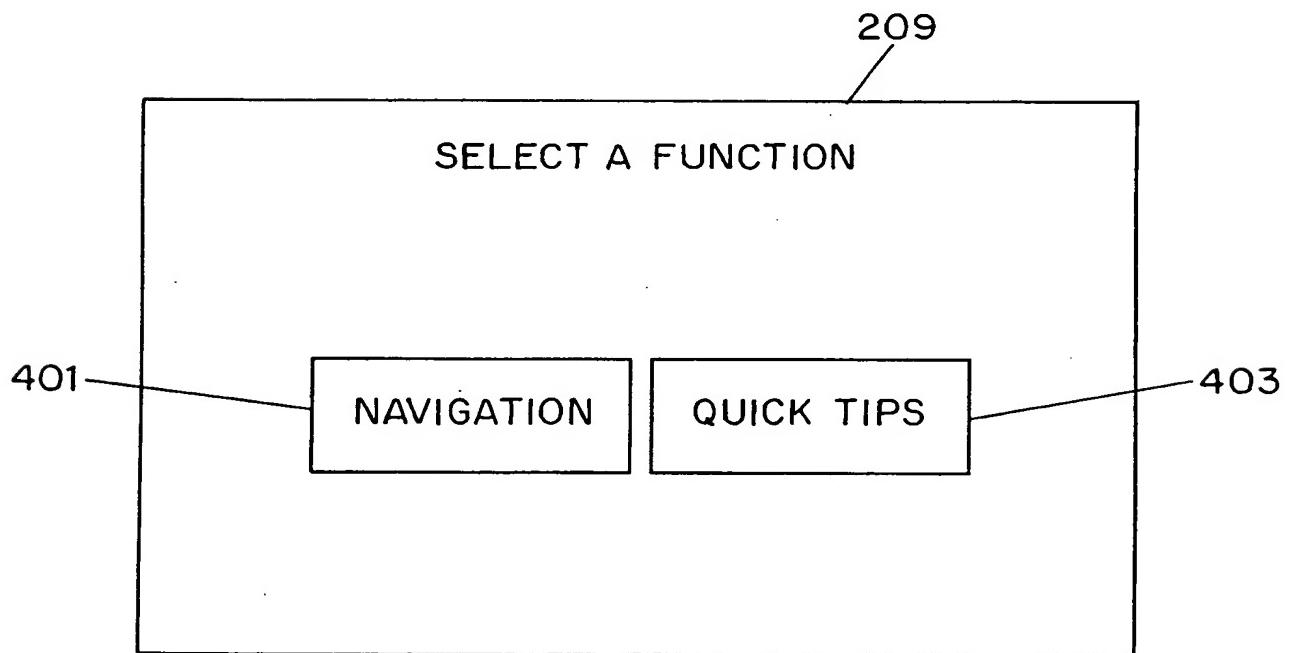


FIG. 4B

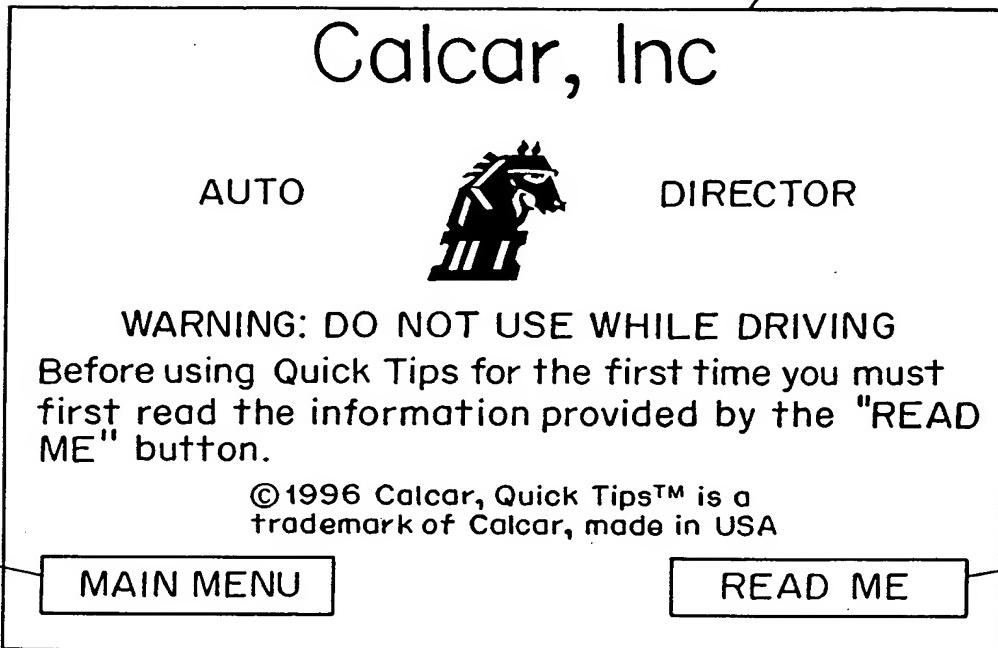


FIG. 5

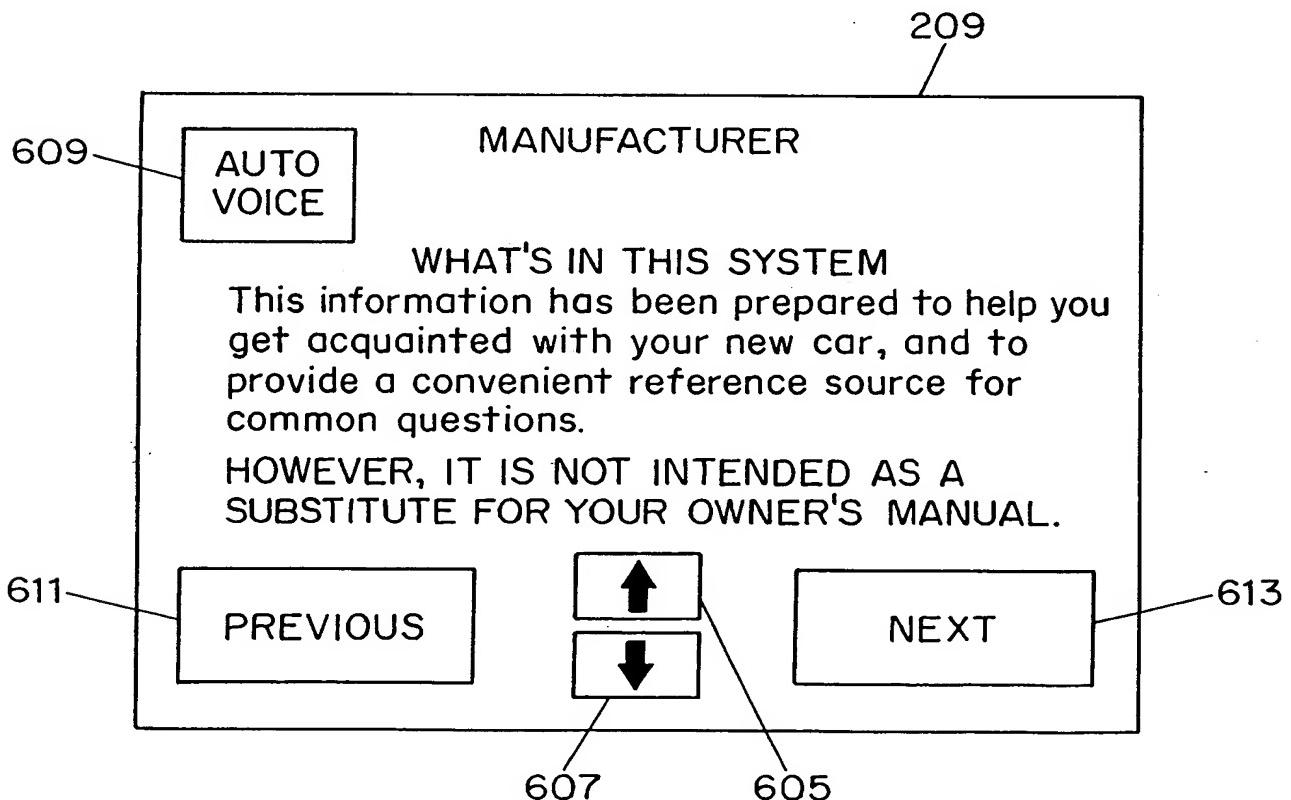


FIG. 6

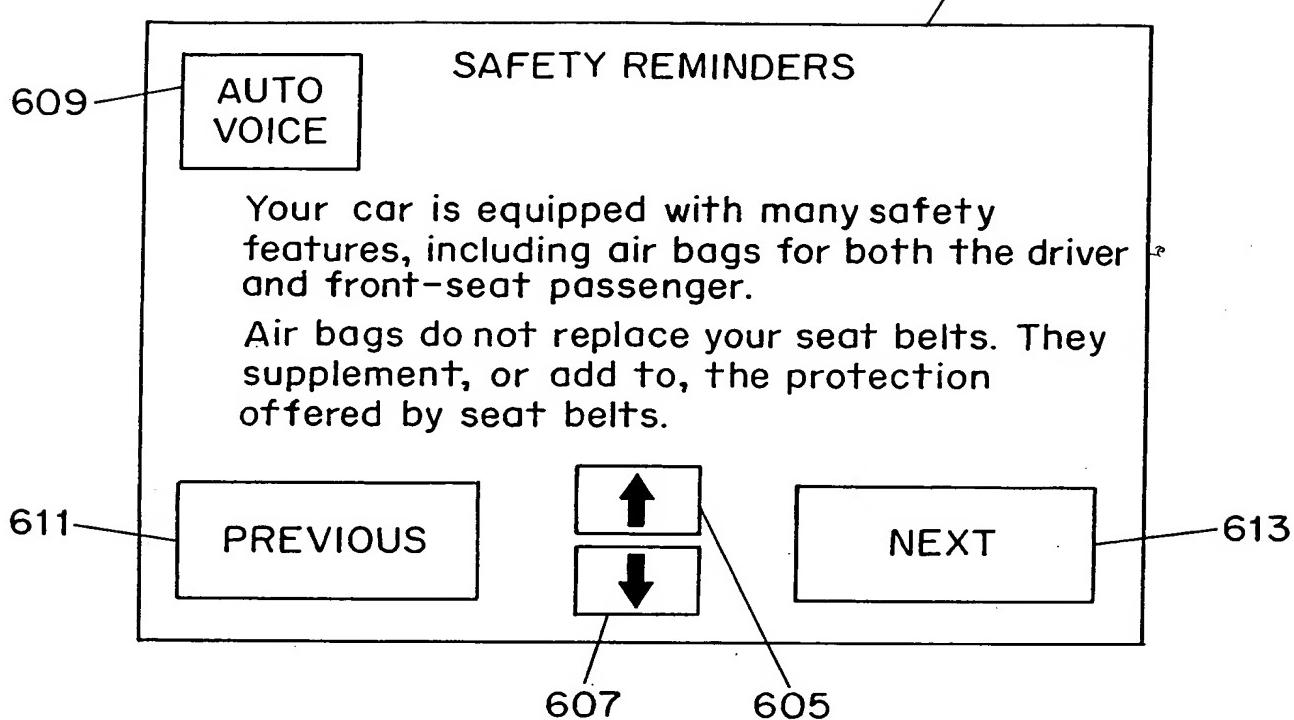


FIG. 7

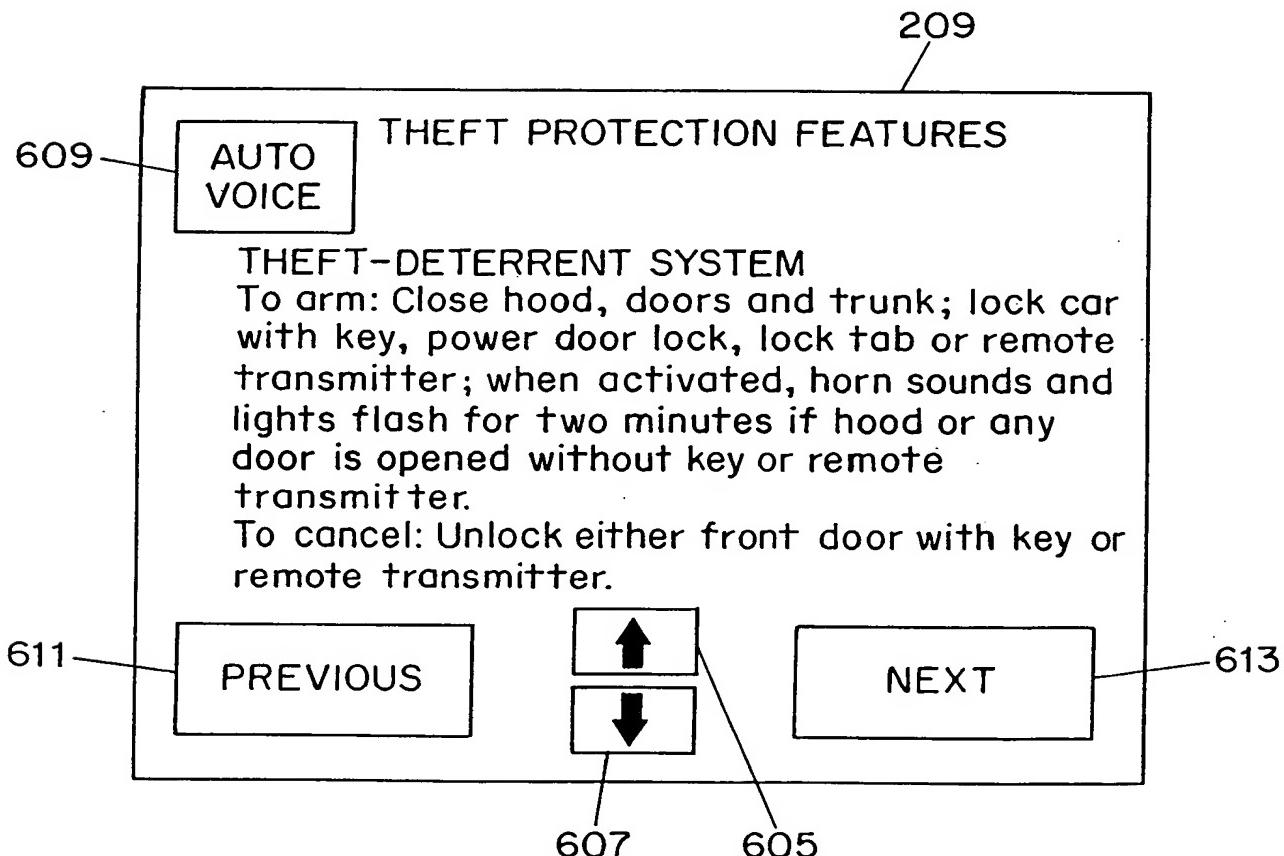


FIG. 8

9/15

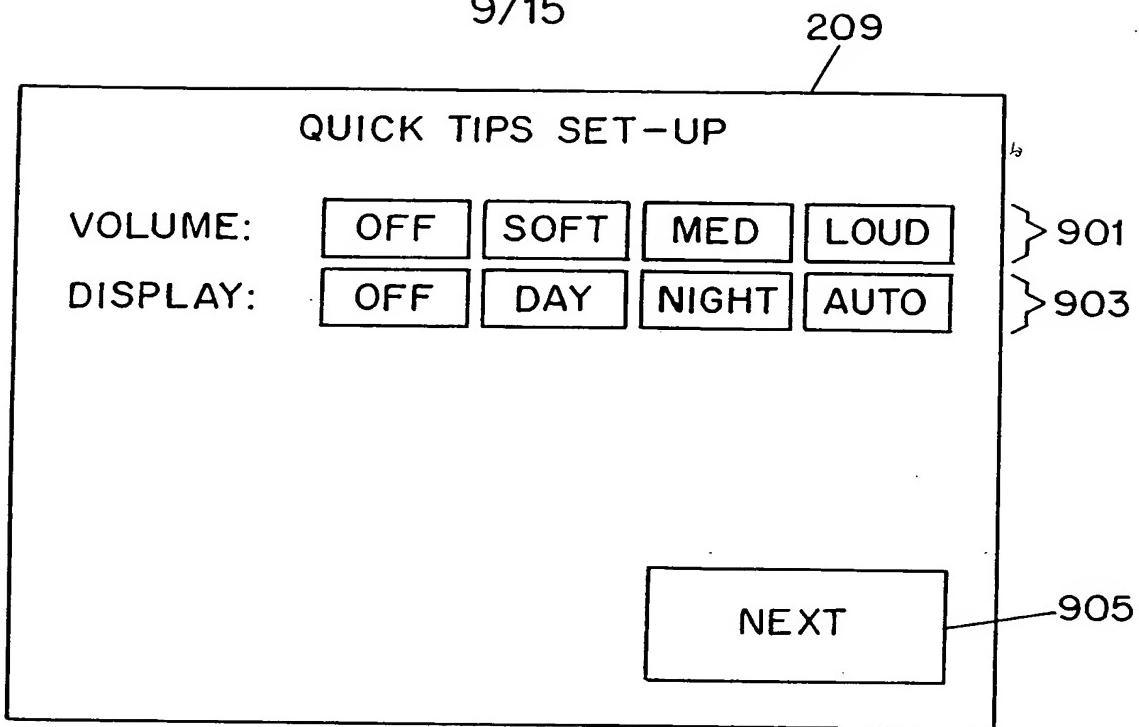


FIG. 9

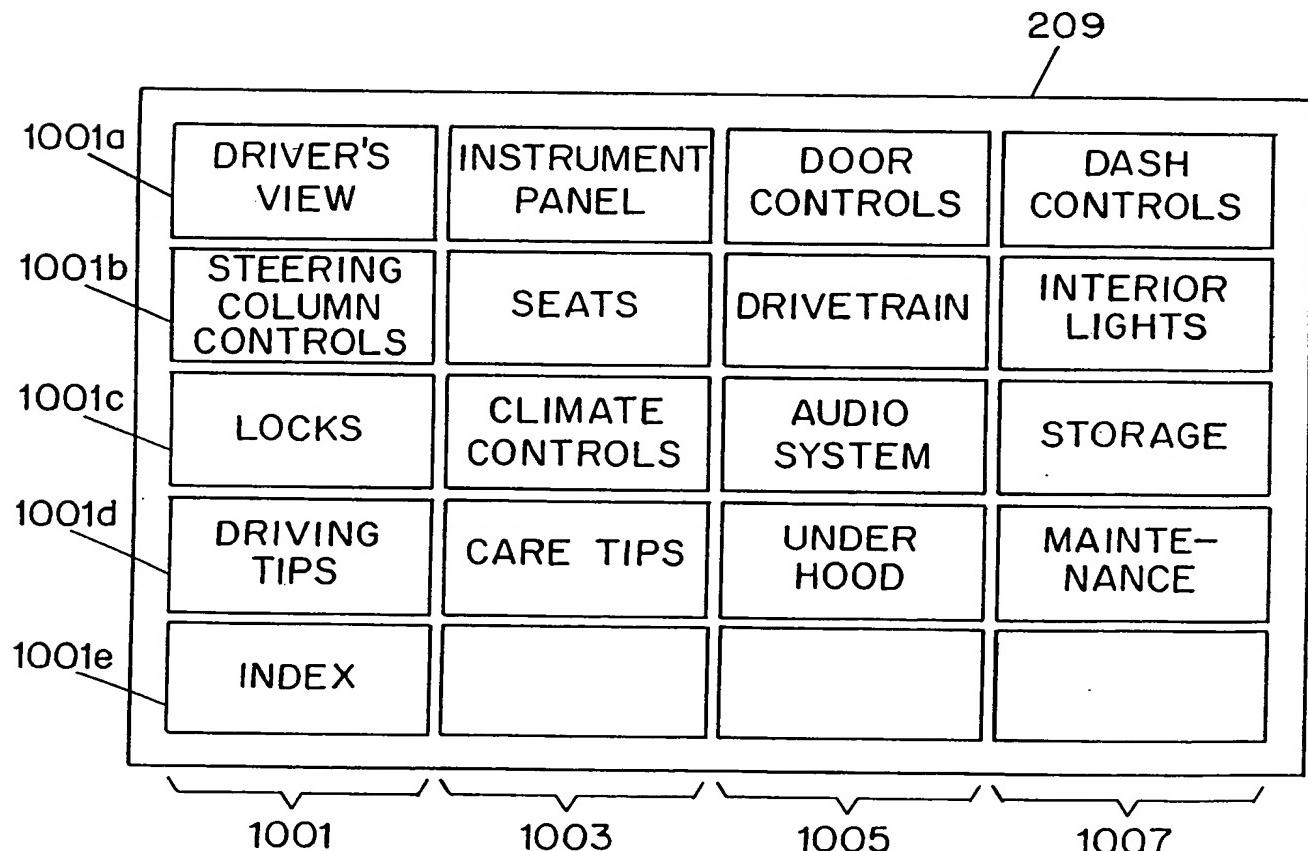


FIG. 10

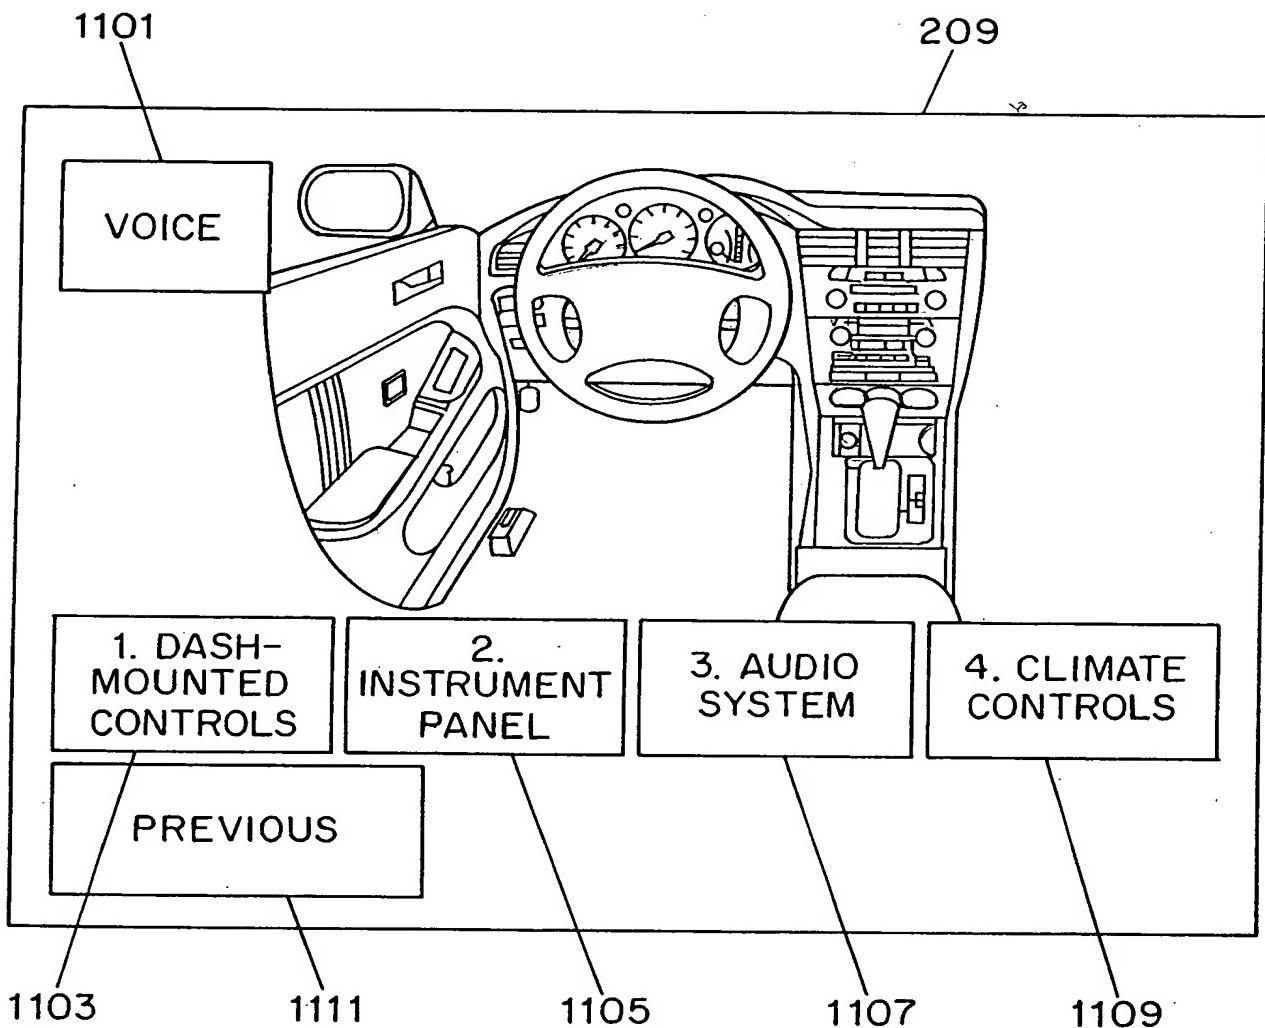


FIG. 11

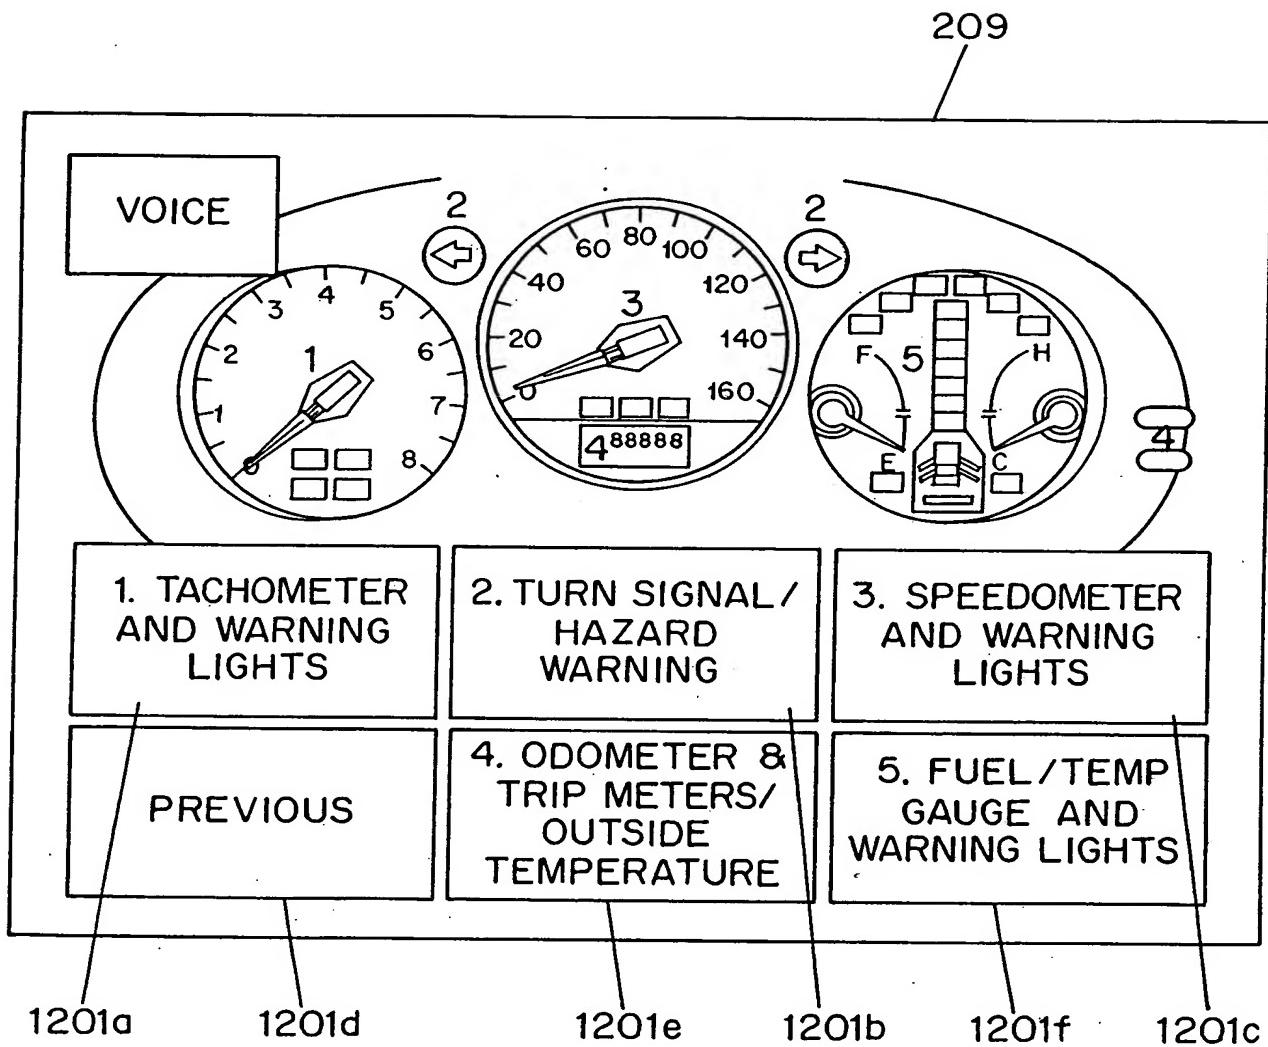


FIG. 12

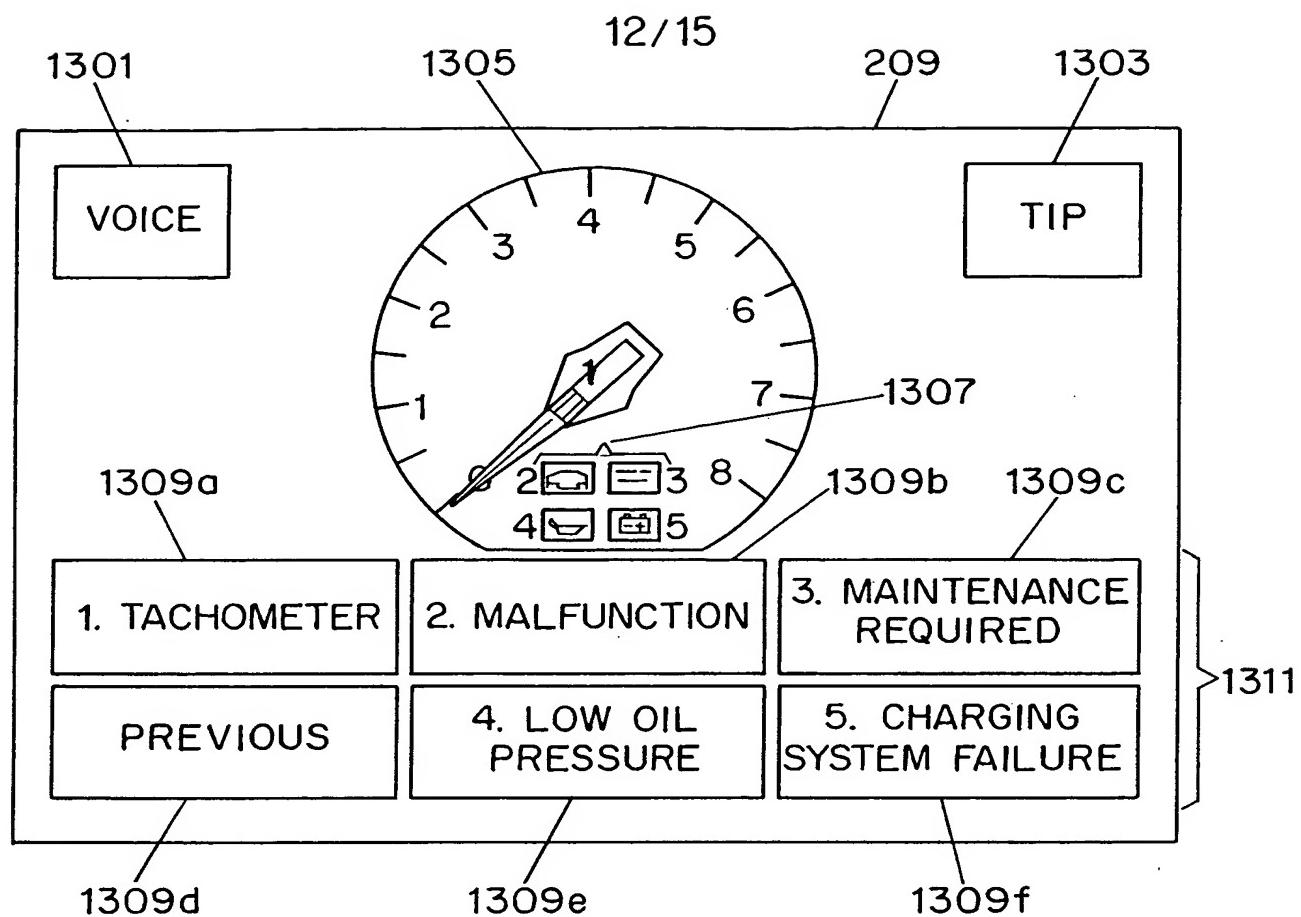


FIG. 13

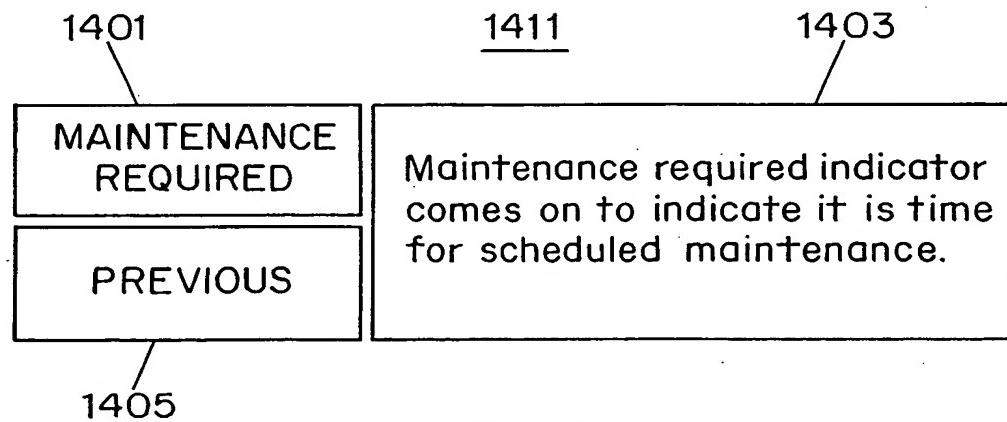


FIG. 14

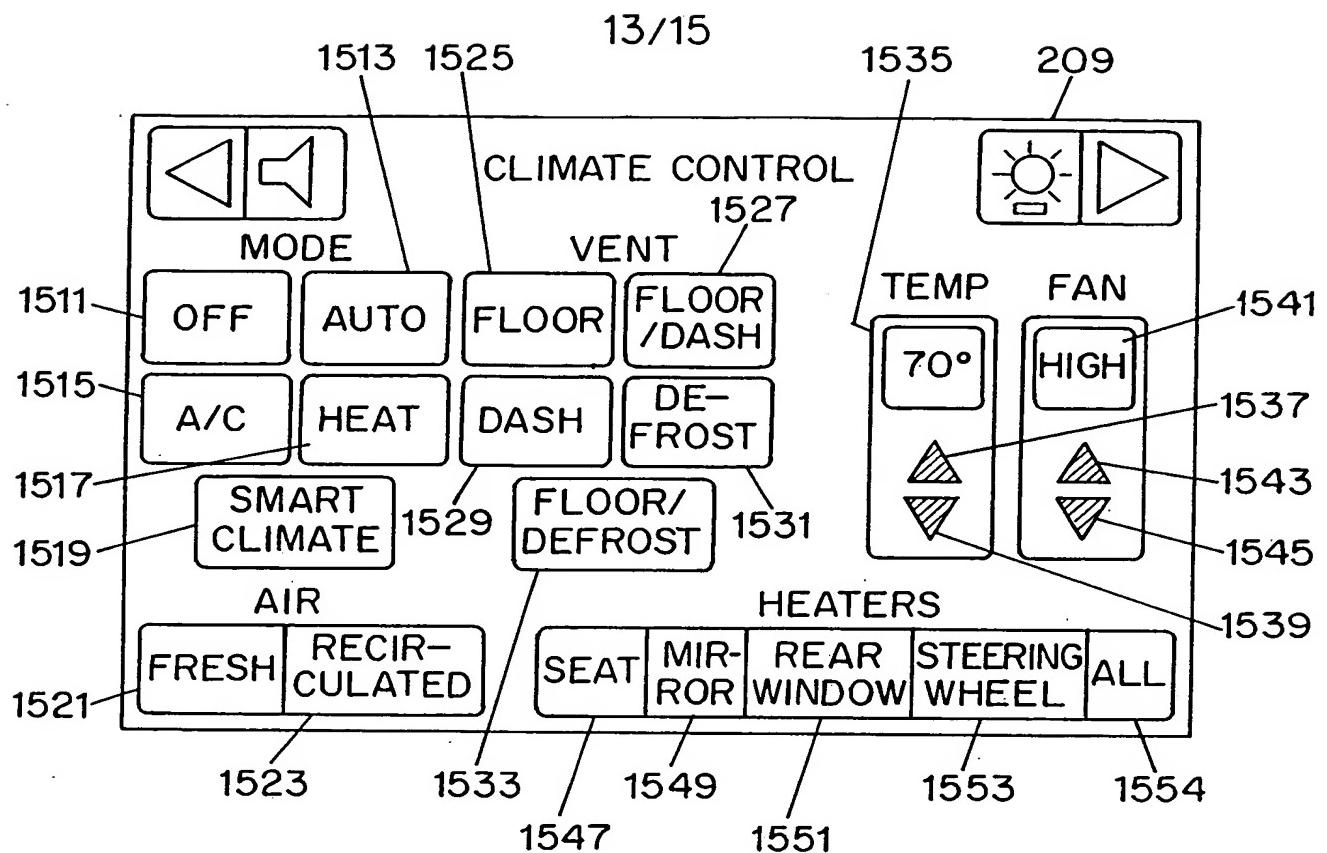


FIG. 15

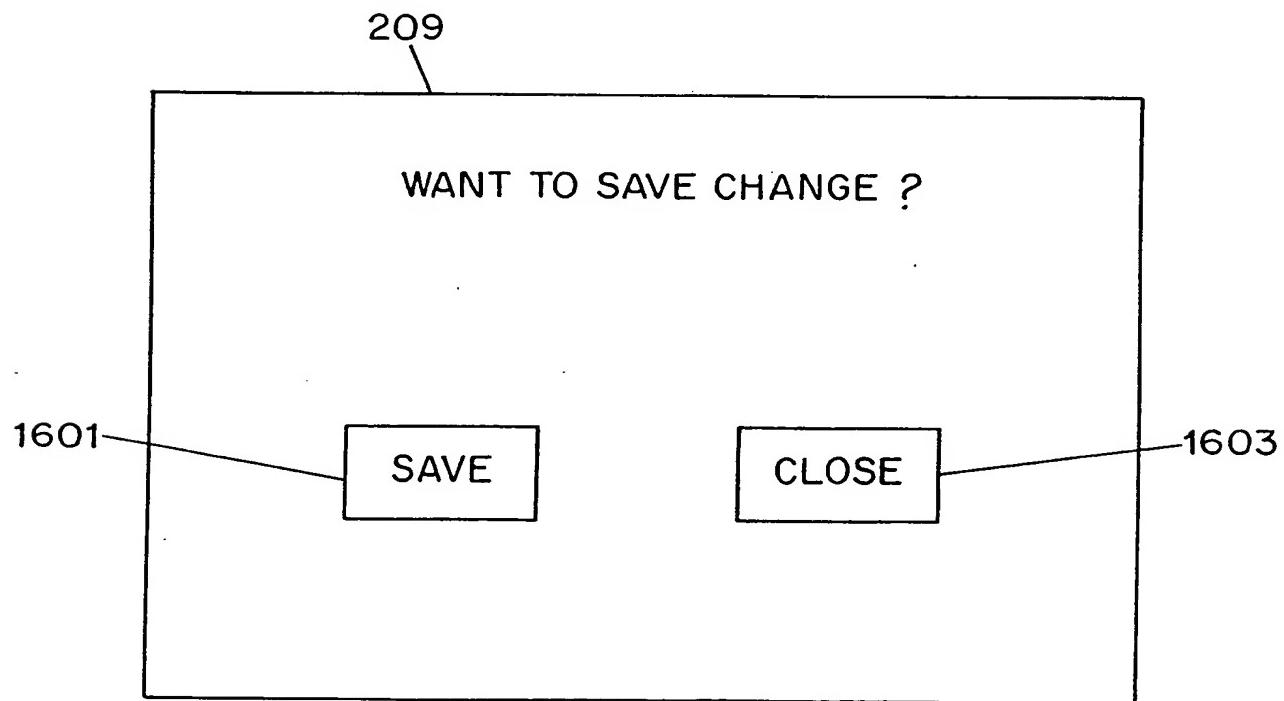


FIG. 16

14/15

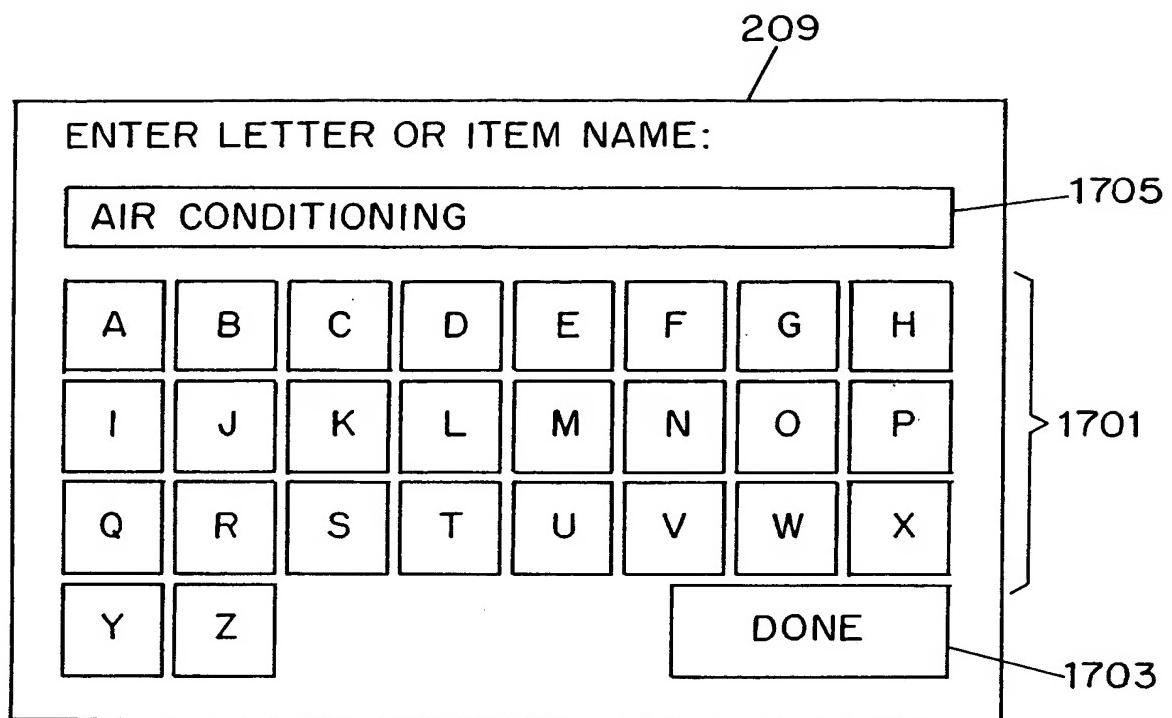


FIG. 17

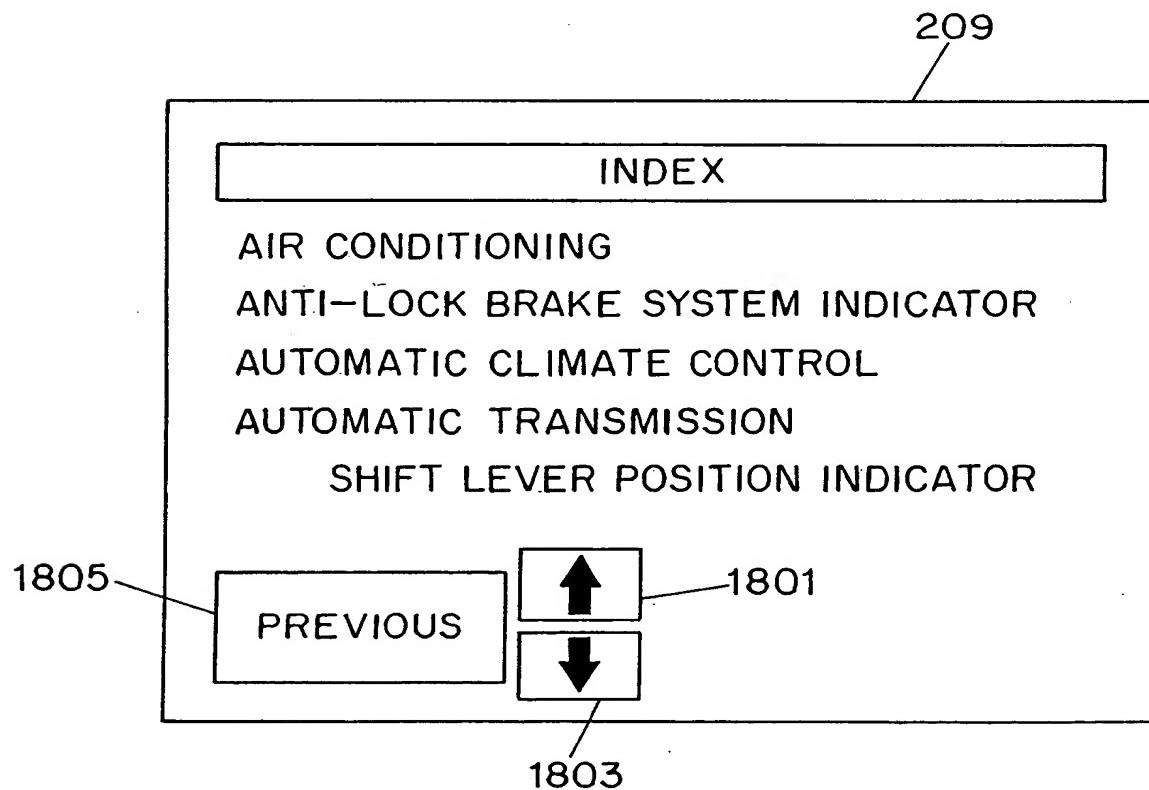


FIG. 18

1901

1903

AIR CONDITIONING	LINK TO CLIMATE CONTROL SCREEN OF FIG. 15
ANTI-LOCK BRAKE SYSTEM INDICATOR	LINK TO WARNING LIGHT OPTION #4 ON FUEL/TEMP SCREEN (NOT SHOWN)
AUTOMATIC CLIMATE CONTROL	LINK TO CLIMATE CONTROL SCREEN OF FIG. 15
•	•
•	•
•	•

CHARGING SYSTEM FAILURE INDICATOR	LINK TO CHARGING SYSTEM FAILURE OPTION 1309f (FIG. 13)
CLIMATE CONTROL SYSTEM	LINK TO CLIMATE CONTROL SCREEN OF FIG. 15
COOLING	LINK TO CLIMATE CONTROL SCREEN OF FIG. 15
CRUISE CONTROL INDICATOR	LINK TO WARNING LIGHT OPTION #2 ON SPEEDOMETER SCREEN (NOT SHOWN)
DEFOG/DEFROST	LINK TO CLIMATE CONTROL SCREEN OF FIG. 15
DOOR AJAR INDICATOR	LINK TO WARNING LIGHT OPTION #7 ON FUEL/TEMP SCREEN (NOT SHOWN)
DIRECTIONAL SIGNALS INDICATOR	LINK TO TURN SIGNAL / HAZARD WARNING OPTION 1201b (FIG. 12)
•	•
•	•
•	•

•	•
•	•
•	•
•	•
•	•

FIG. 19